

# Remote Control Fitting and User Guide

## Read thoroughly and keep in a safe place

Read the guide thoroughly before using the remote control. Keep the guide in a safe place for later use and to pass on to new users. Should you have any questions regarding installation or use of your Secuyou system, please contact us.

The remote control is future-proof and can be used with other products bearing the io-homecontrol logo, e.g. intelligent home management system.

### The pack contains:

Remote control  
Remote control holder  
2 x CR2450 batteries  
Fitting and User Guide

## Step 1: Fitting the remote control holder


The remote control is supplied with a self-adhesive holder, which easily fits on the wall.

Check the remote control can control the locks from the preferred remote control position before its final fitting (See steps 2–4). The remote control range is 150 m in free field. Dependent on physical interiors, the range indoors is approx. 30 m. Structures with reinforced concrete, metal ceilings and plaster board walls steel guides may reduce the range.

1. Position the holder inside, at the main door most often used for exiting the property. The holder should be positioned out of reach of children.
2. Clean the position where the holder is to be fixed.
3. Remove the self-adhesive covering and stick the holder onto the surface. The holder can be fixed with screws if the surface is uneven.

## Step 2: Activating batteries

1. Remove the small plastic clip (pull off) to activate the batteries.

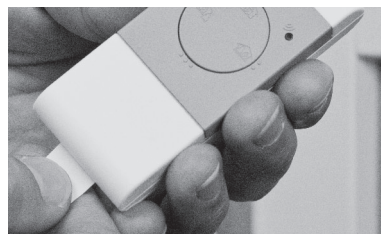


## Step 3: Registration of remote control and lock

You only have to configure one remote control when you want to control the same lock with several remote controls. Simply copy the remote control's settings to the other remotes (see next page).


1. Check the batteries in the lock are activated. See the Lock Fitting and User Guide, step 6.
2. NB: During registration, the distance between the lock and remote control must be no more than 10 m. We recommend you register one lock at a time. Ensure the patio door/window is closed.
3. Press the button on the lock with a pin or similar (press for longer than 5 seconds).



4. The LED  flashes green to show registration is underway.
5. Press PRG on the remote control with a pin or similar (press for less than 2 seconds).



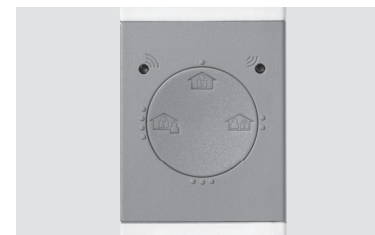

6. The left LED on the remote control flashes green, while registration is underway.




7. When registration is complete, both LEDs stay green. The system is now ready for use. NB: The system is used with a PIN code (see step 5).
8. If registration failed, both LEDs on the remote control flash red. Go back to section 5.

## Step 4: Check the lock system

1. Check the patio door/window is closed.
2. Press "Lock"  on the remote control.
3. Check the patio door/window is locked.
4. Press "Unlock"  on the remote control.
5. Check the patio door/window is unlocked.

*Continues on next page.*

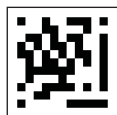

Visit [secuyou.dk](http://secuyou.dk) to see installation demonstration film or SMS "scan" to 1220 and scan the code.


Secuyou ApS  
Tel: +45 7020 3003

[www.secuyou.dk](http://www.secuyou.dk)




## Step 5: Select a 4-digit PIN code for the remote control

1. Press KEY on the remote control with a pin or similar (press for less than 2 seconds).

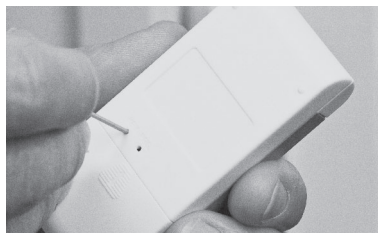

The left LED lights up and stays green.

2. Select a PIN code with 4 presses in number order 1-4 on the round touch disk.

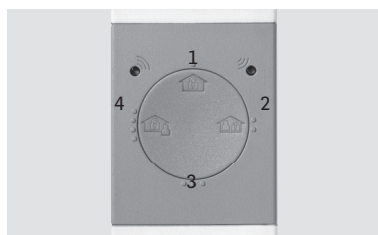


The left LED flashes yellow during selection.

3. With the last selection the LED turns green. The PIN code is now saved.


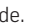 
The remote control can only have one PIN code.

## Use immediately and learn how to operate the lock system

### Lock


Press "Lock"  to lock all locks. Use this function when you exit the property and there is no one else inside.

### Unlock

To unlock, press "Unlock"  or "House lock"  and enter the PIN code.



If the PIN code is incorrectly entered 3 times, a 5 minute timeout is activated. The left LED lights up red and the remote control will not operate during the timeout.

### Home lock

When you press "Home lock"  all locks lock. Use this function when you remain in the property and want to lock all locks. Unlock a lock by pressing the Esc button on the lock, and the patio door/ window can now be opened.


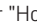 
If you do not open the patio door/ window, it will automatically lock again after 10 seconds. When you close the patio door/window you can activate "Home lock" by pressing the Esc button once.


### Forgot to close the patio door/window?


Press "Lock"  or "Home lock"  the right LED lights red if a patio door or window is open. To lock the patio door or window first manually close it and then press the Esc button. The patio door/ window is now locked.

## Change battery warning

The left LED on the remote control lights yellow if the battery power is low. Indicates the battery should be changed.

A lock battery needs to be replaced if when you press "Unlock"  or "Home lock"  the right LED on the remote control flashes red.

1. Remove the remote control from the holder and press "Unlock"  close to the various locks – one at a time.

The lock that requires a new battery will flash red . See battery change instructions in the Lock Fitting and User Guide.

On "Lock" the lock stays locked if the batteries have run dry. On "Home lock" the lock automatically unlocks if the batteries have run dry.

You can check to see if the batteries require changing by pressing the Esc button on the lock.

## Copying settings to another remote control

1. Press PRG on the remote control that has the settings you want to copy (press for longer than 2 seconds but less than 5 seconds). The left LED flashes green. The LED stays green when copying is finished. If copying failed, both LEDs turn red. Copying must then restart from the beginning.

2. Press PRG on the remote control you want to copy the settings to (press for less than 2 seconds). Both LED stays green when copying is finished. If copying failed, both LEDs turn red. Copying must then restart from the beginning.

The remote control is compatible with other io-homecontrol devices. This means you can use the remote control to operate other products registered in other devices. And you can easily copy settings from your remote control to other io-homecontrol devices.

## Deleting PIN code

You can only delete the PIN code in the unlocked state.

1. Press KEY on the remote control with a pin or similar (press for less than 2 seconds).

Wait 30 seconds. The PIN code is now deleted.

## Resetting the remote control

1. Press PRG on the remote control (press for longer than 5 seconds). Both LEDs flash red 8 times and then stay lit for five seconds.

Visit [secuyou.dk](http://secuyou.dk) for more details and demonstration films.

# SECUYOU



## Remote Control Fitting and User Guideline



homecontrol® [www.io-homecontrol.com](http://www.io-homecontrol.com)